


KITCHEN TAP-SET INSTALLATION INSTRUCTIONS

Applies to the model: ALABAMA

1. TAP COMPLETION CHECK:

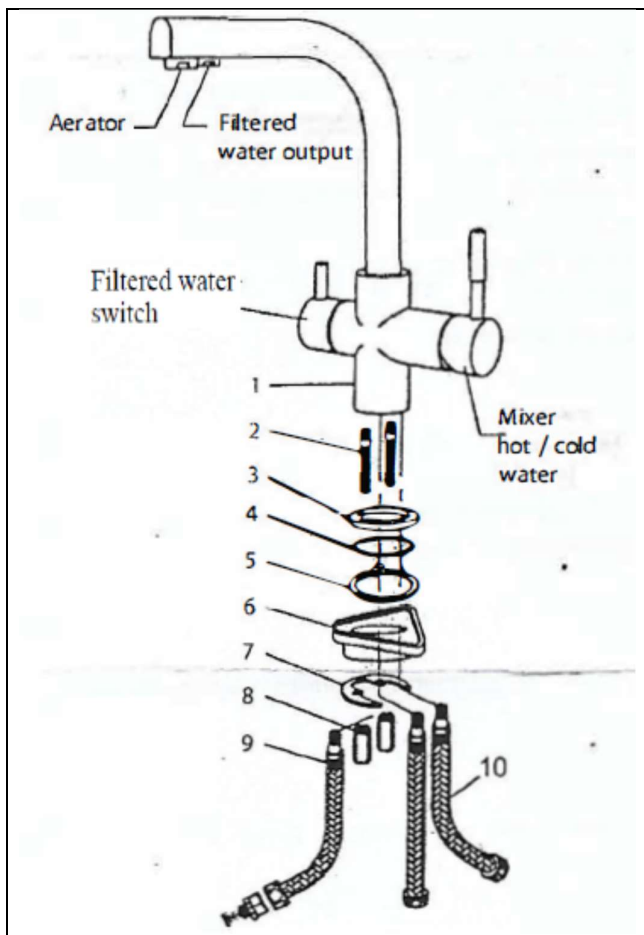

List of standard elements

Nr	Name of the Element	Quantity
1.	Tap-set body	1
2.	Mounting rods	2
3.	Metal ring	1
4.	Rubber sealing washer	1
5.	Rubber cushioning pad	1
6.	Plastic stabilising element	1
7.	Metal pressure washer	1
8.	Pressure nut	2
9.	1/2" flexible filtered water connection hose	1
10.	3/8" flexible connection hose	2
11.	The key to unscrew the aerator	1



2. ATTENTION!

- Before installing the tap-set, make sure that the hot and cold water supply pipes are connected correctly. If you are in front of the taps, the hot water outlet should be on the left and the cold outlet on the right.
- Make sure that the water supply system is fitted with mesh filters so that no dirt such as sand, rust, scale or other contaminants gets into the tap-set head.

3. TAP-SET INSTALLATION INSTRUCTIONS

- Flush the water supply system.
- Screw the mounting rods with the thread (2) into the tap body (1) and remove the nut and pressure nut (8).
- Insert the rubber sealing washer (4) into the metal ring (3).
- Place the metal ring (3) with the rubber washer (4) onto the tap-set body (1).

- Insert the faucets into the hole in the sink.
- Apply a cushioning rubber pad (5) under the sink, then a plastic stabilising element (6).
- Place the metal pressure washer on the protruding ends of the mounting rods (2). (7) and screw the tap-set onto the sink using the clamping nuts (8). This is best done with a socket wrench, until the tap-set is firmly attached to the sink.
- Connect flexible hose (10) to angle valves with mesh filters (which are not included with the tap-set so that they do not break (note that there are rubber seals in the hoses, which are included with the hoses).
- Connect the filtered water connection hose (9) to the filter installation using a nipple (depending on the type of filter, the appropriate nipple should be purchased)
- Use the key (11) to unscrew the aerator and rinse the tap-set well.
- Screw the aerator on with the key (11).

The customer is obliged to regularly unscrew and clean the aerators (mixing nozzles) of stone, rust and other foreign matter. If the aerator is very dirty, replace it with a new one.

Water working pressure: up to 6 bar max - use a pressure reducer at higher pressure.

Water temperature: 4°C to 90°C.

WARNING!

This manual is for information only, the tap-set must be installed by a qualified person.

We reserve the right to make technical changes.

Please read the warranty card.

