

INSTRUCTIONS FOR THE ASSEMBLY OF THE APALA 3-WAY PULL-OUT KITCHEN FILTER TAP




1) PLEASE NOTE

Before installing the tap, make sure that the pipes are connected correctly supplying hot & cold water.


If you are in front of the faucet, the hot water outlet should be on the left side and the cold water outlet on the right side.

Make sure the water supply system is equipped with strainers to ensure that no dirt, such as sand, rust, limescale or other has entered the tap head.


Make sure there is a 35mm hole in the worktop or sink.

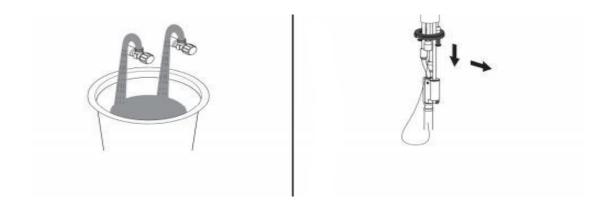


2) Flush the plumbing and close the isolation valves. Remove the mount from the thread of the tap mount.

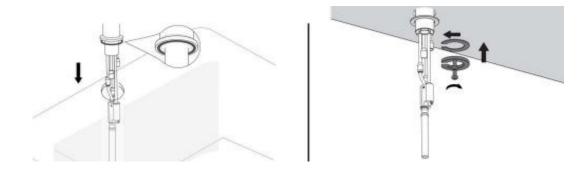

Insert the O-ring into the ring of the tap body. Insert the faucet body with the gasket into the opening in the countertop or sink.

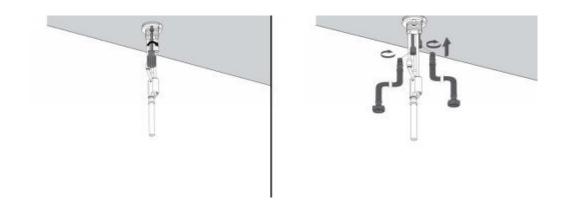



From the bottom, put a rubber and metal washer on the thread of the tap and screw on the clamp nut. Screw the body connection hoses onto the water supply valves.

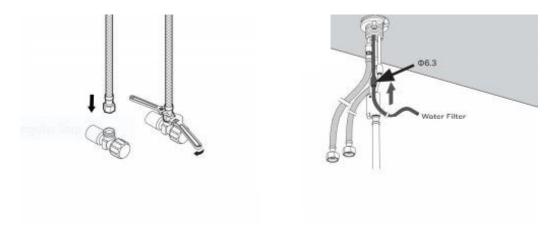

Open the isolation valves. Connect the hose from the filters to the hose to the tap using push-fit coupling (third supply hose).

PAGE 3

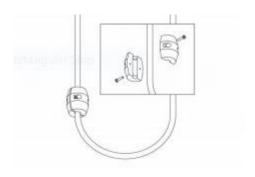

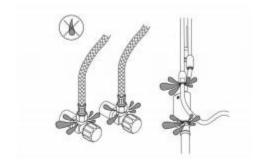

Screw the hose weight to the second hose as shown in the image above. After connecting all the hoses, open the water to test, making sure the connection are tight.

Before using the tap for the first time, unscrew the pull-out spout and rinse the tap. After flushing, screw the spout tip back into place.

Maintenance

The customer is obliged to regularly unscrew and clean the aerator (mixing nozzle) of scale, rust and other foreign bodies. If the aerator is heavily soiled, replace it with new.

Water working pressure: up to 6 bar —use a pressure reducer for higher pressure.

Water temperature: 4 degrees C—90 degrees C) optimum working temperature up to 65 degrees C).

PLEASE NOTE — These instructions are for information only and the tap must be installed by a qualified person.